 


**MR. MARK'S MONTHLY MAINTENANCE TIP***Replacing Head Bearings*

When the time comes to replace the head bearing on your conveyor, there is one important tip that TRAMCO can give you. This will enable you to get the full life from your new bearing.

***Before you secure the new bearing firmly to its base make sure that you square the head shaft with the conveyor!***

You can do that as demonstrated in the picture above. Then you would firmly tighten your packing gland seal to a secure position.

**If you or an associate would like to receive these monthly tips, please fill in the blanks and send this fax back to us. Thank you!**

Name:

E-mail:

Fax:

Title: